




**ARCTIC SILVER 95Se Stairclimber**

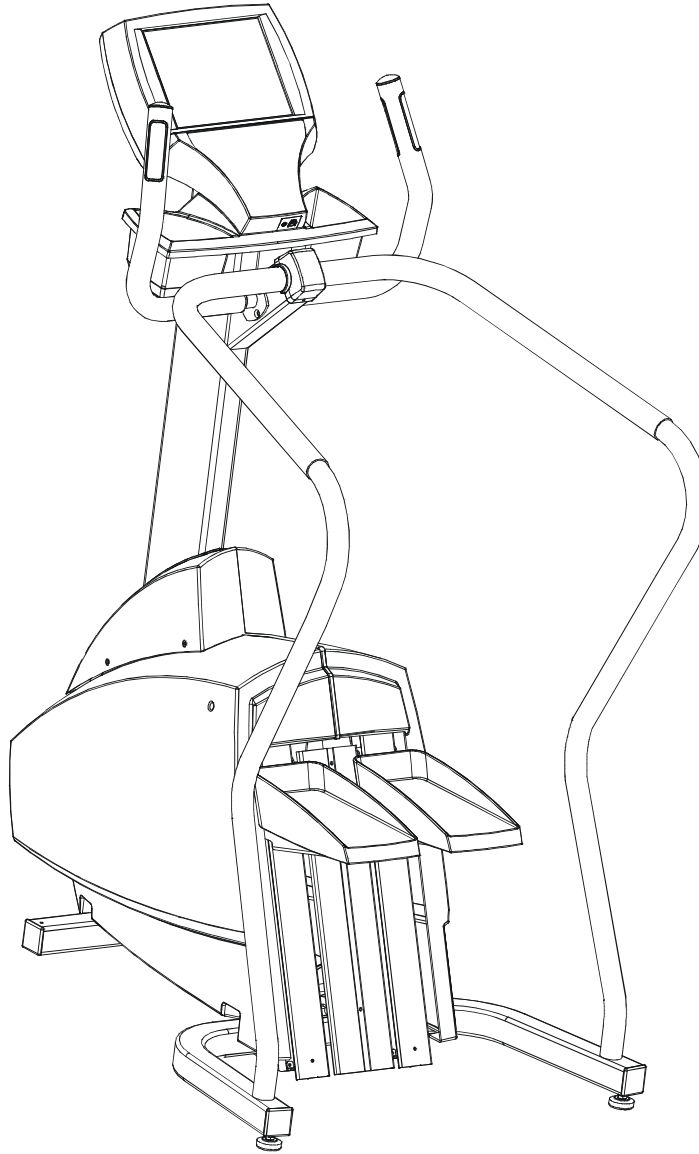

**Customer Support Services**  
***PARTS MANUAL*** rev 14 Jul 2008

OPERATION MANUAL – (ENG)	M051-00K47-A136
OPERATION MANUAL – (F/S/P)	M051-00K47-A137
OPERATION MANUAL – (G/D/I)	M051-00K47-A138
OPERATION MANUAL – (JAP)	M051-00K47-A139
OPERATION MANUAL – (CHI)	M051-00K47-A140
PARTS BAG	AK47-00123-0001
HARDWARE BAG	AK47-00106-0000
POWER SUPPLY 12V, 4.5A Without Line Cord	118E-00001-0161
LINE CORD, DOM. 10A 125V	0017-00003-0704
LINE CORD, CON. 10A 250V	0017-00003-0691
LINE CORD, 10A U.K.	0017-00003-0889
LINE CORD, AUSTRALIA	0017-00003-0918
TOUCH-UP PAINT: SPRAY CAN .5 OZ. BOTTLE .33 OZ. PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K47-A013

	Page
CONSOLE ASSEMBLY .....	4
CONSOLE COMPONENTS.....	5
FRAME COMPONENTS.....	6
SHROUDS AND PEDAL TUBE .....	7
PEDAL ASSEMBLY.....	8
CLUTCH/SHAFT/PULLEY ASSEMBLY .....	9
LEFT CLUTCH ASSEMBLY .....	10
CROSSOVER PULLEY ASSEMBLY .....	11
ALTERNATOR ASSEMBLY.....	12
GUIDE ROLLERS .....	13
POWER CONTROL BOARD & RESISTORS .....	14
POLAR CAP & HR ELECTRODES .....	15
CABLES.....	16


**The version –04, 95SE has both Life Pulse sensors  
and Telemetry for reading Heart rate.**

# ARCTIC SILVER 95SE

## Console Assembly

95SE-0XXX-04

S/N MSU100000 and up

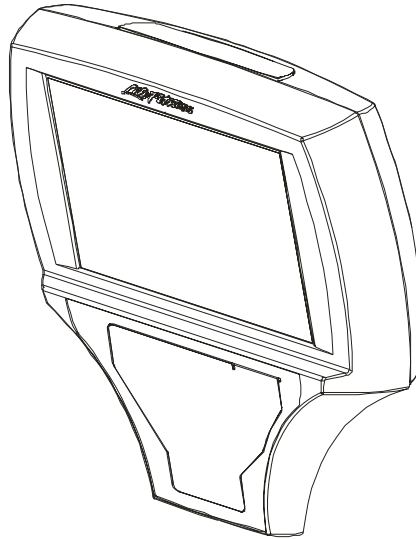


CONSOLE ASSEMBLY	
Part Number	Description
AK47-00174-0001	CONS-ASSY: MFG; 95SE-04; NTSC; ENG
AK47-00174-0004	CONS-ASSY: MFG; 95SE-04; NTSC; SPN
AK47-00174-0006	CONS-ASSY: MFG; 95SE-04; NTSC; JAP
AK47-00174-0007	CONS-ASSY: MFG; 95SE-04; NTSC; FRN
AK47-00174-0011	CONS-ASSY: MFG; 95SE-04; NTSC; CHI
AK47-00175-0002	CONS-ASSY: MFG; 95SE-04; PAL; ENG
AK47-00175-0003	CONS-ASSY: MFG; 95SE-04; PAL; GER
AK47-00175-0004	CONS-ASSY: MFG; 95SE-04; PAL; SPN
AK47-00175-0007	CONS-ASSY: MFG; 95SE-04; PAL; FRN
AK47-00175-0008	CONS-ASSY: MFG; 95SE-04; PAL; ITL
AK47-00175-0009	CONS-ASSY: MFG; 95SE-04; PAL; DUT
AK47-00175-0010	CONS-ASSY: MFG; 95SE-04; PAL; POR
AK47-00175-0011	CONS-ASSY: MFG; 95SE-04; PAL; CHI

# ARCTIC SILVER 95SE

## Console Components

95SE-0XXX-04

S/N MSU100000 and up

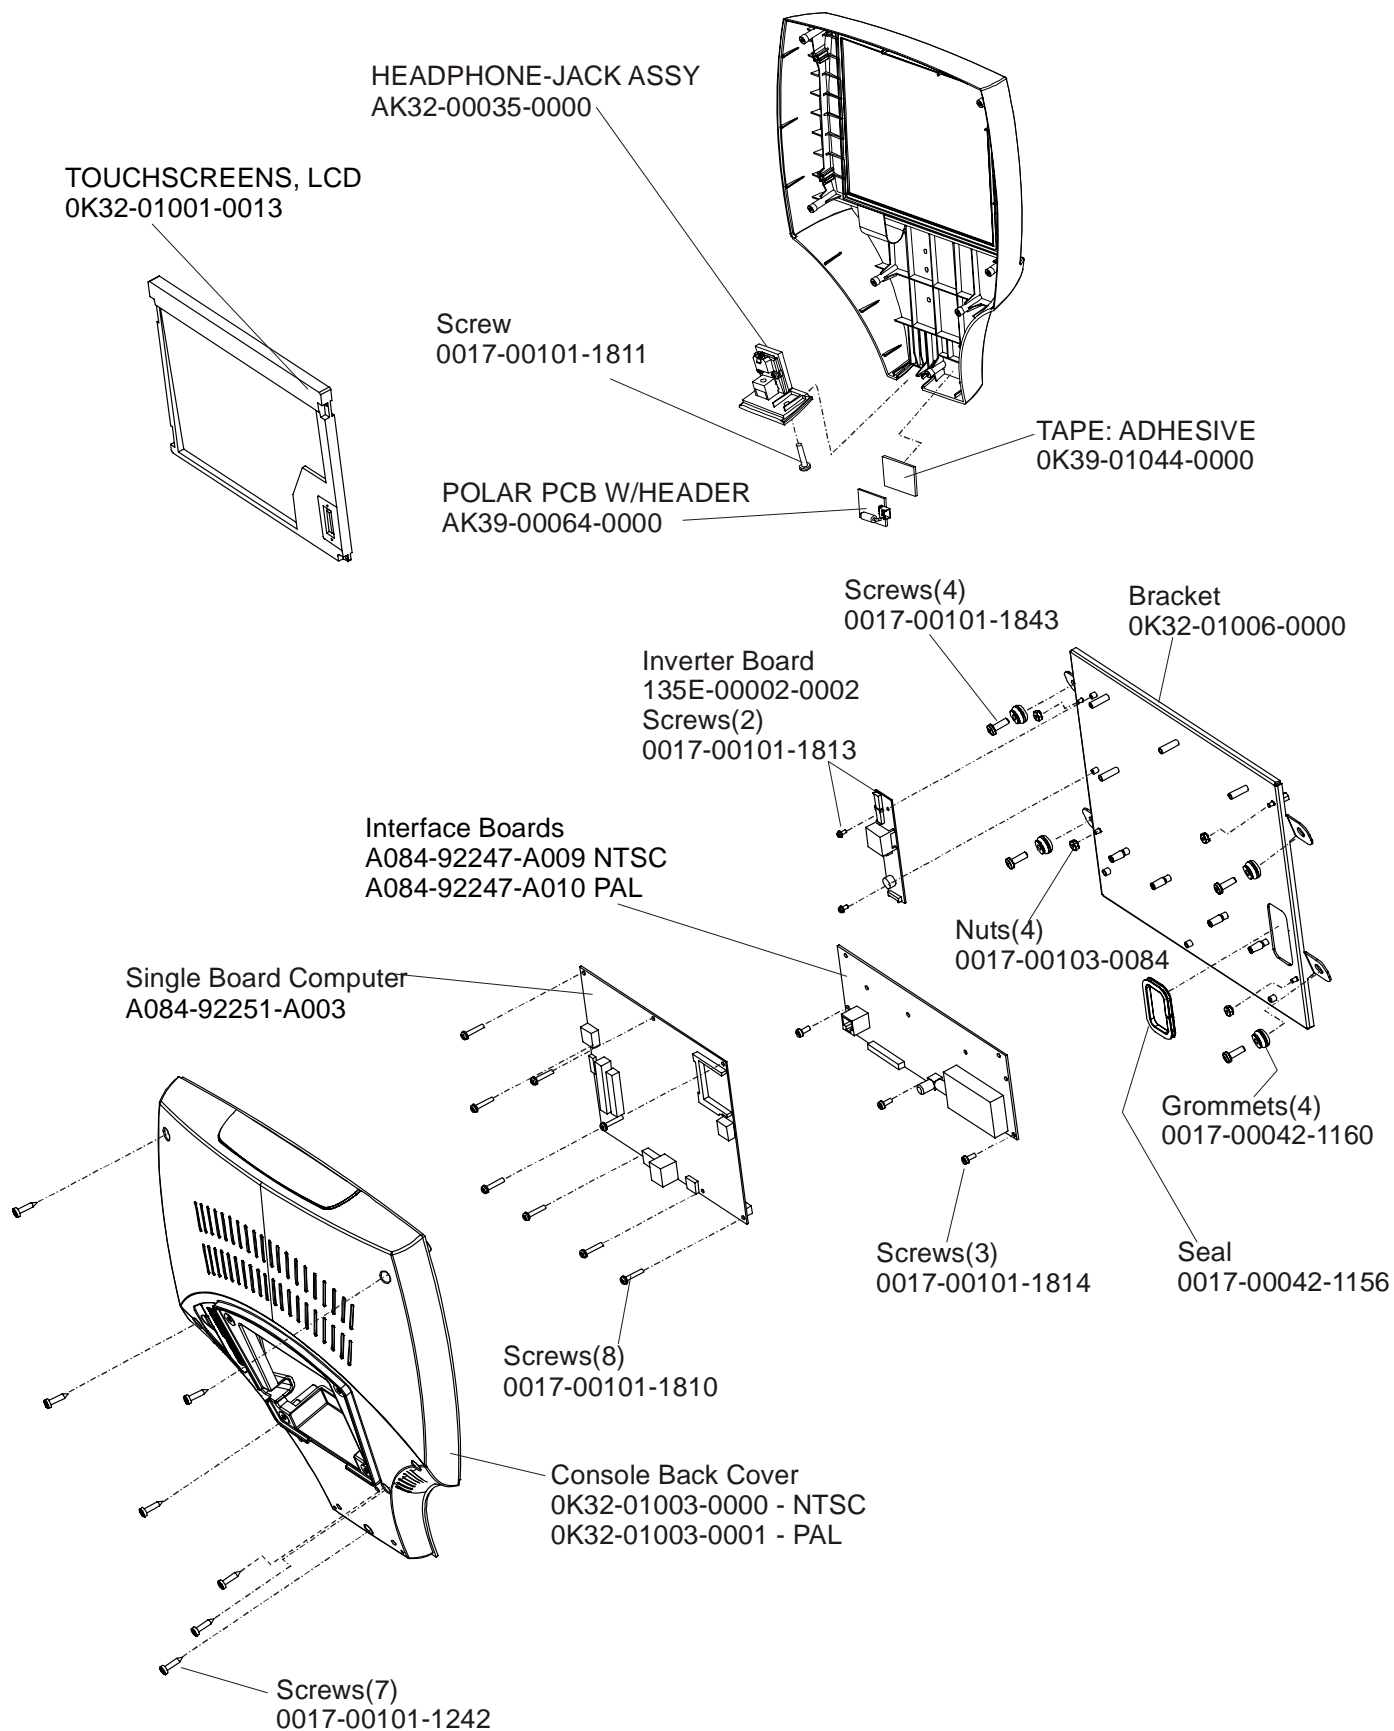


# ARCTIC SILVER 95SE

## Frame Components

95SE-0XXX-04


S/N MSU100000 and up

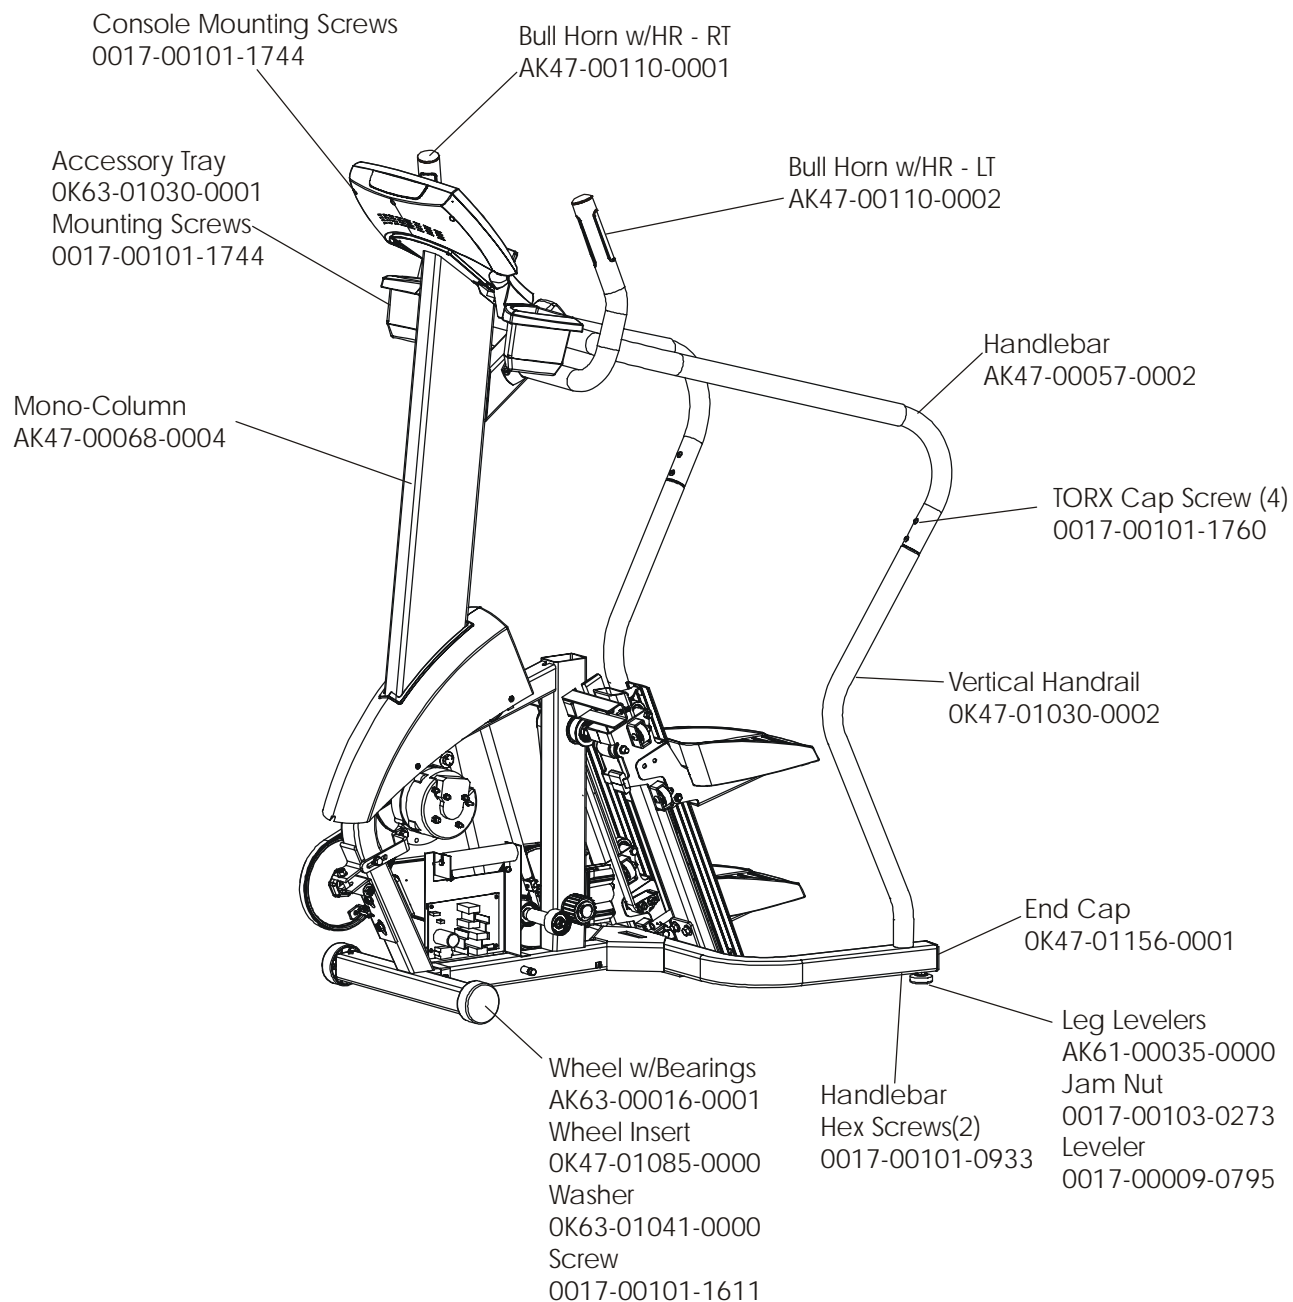

# ARCTIC SILVER 95SE

## Shrouds and Pedal Tube

95SE-0XXX-04  
S/N MSU100000 and up

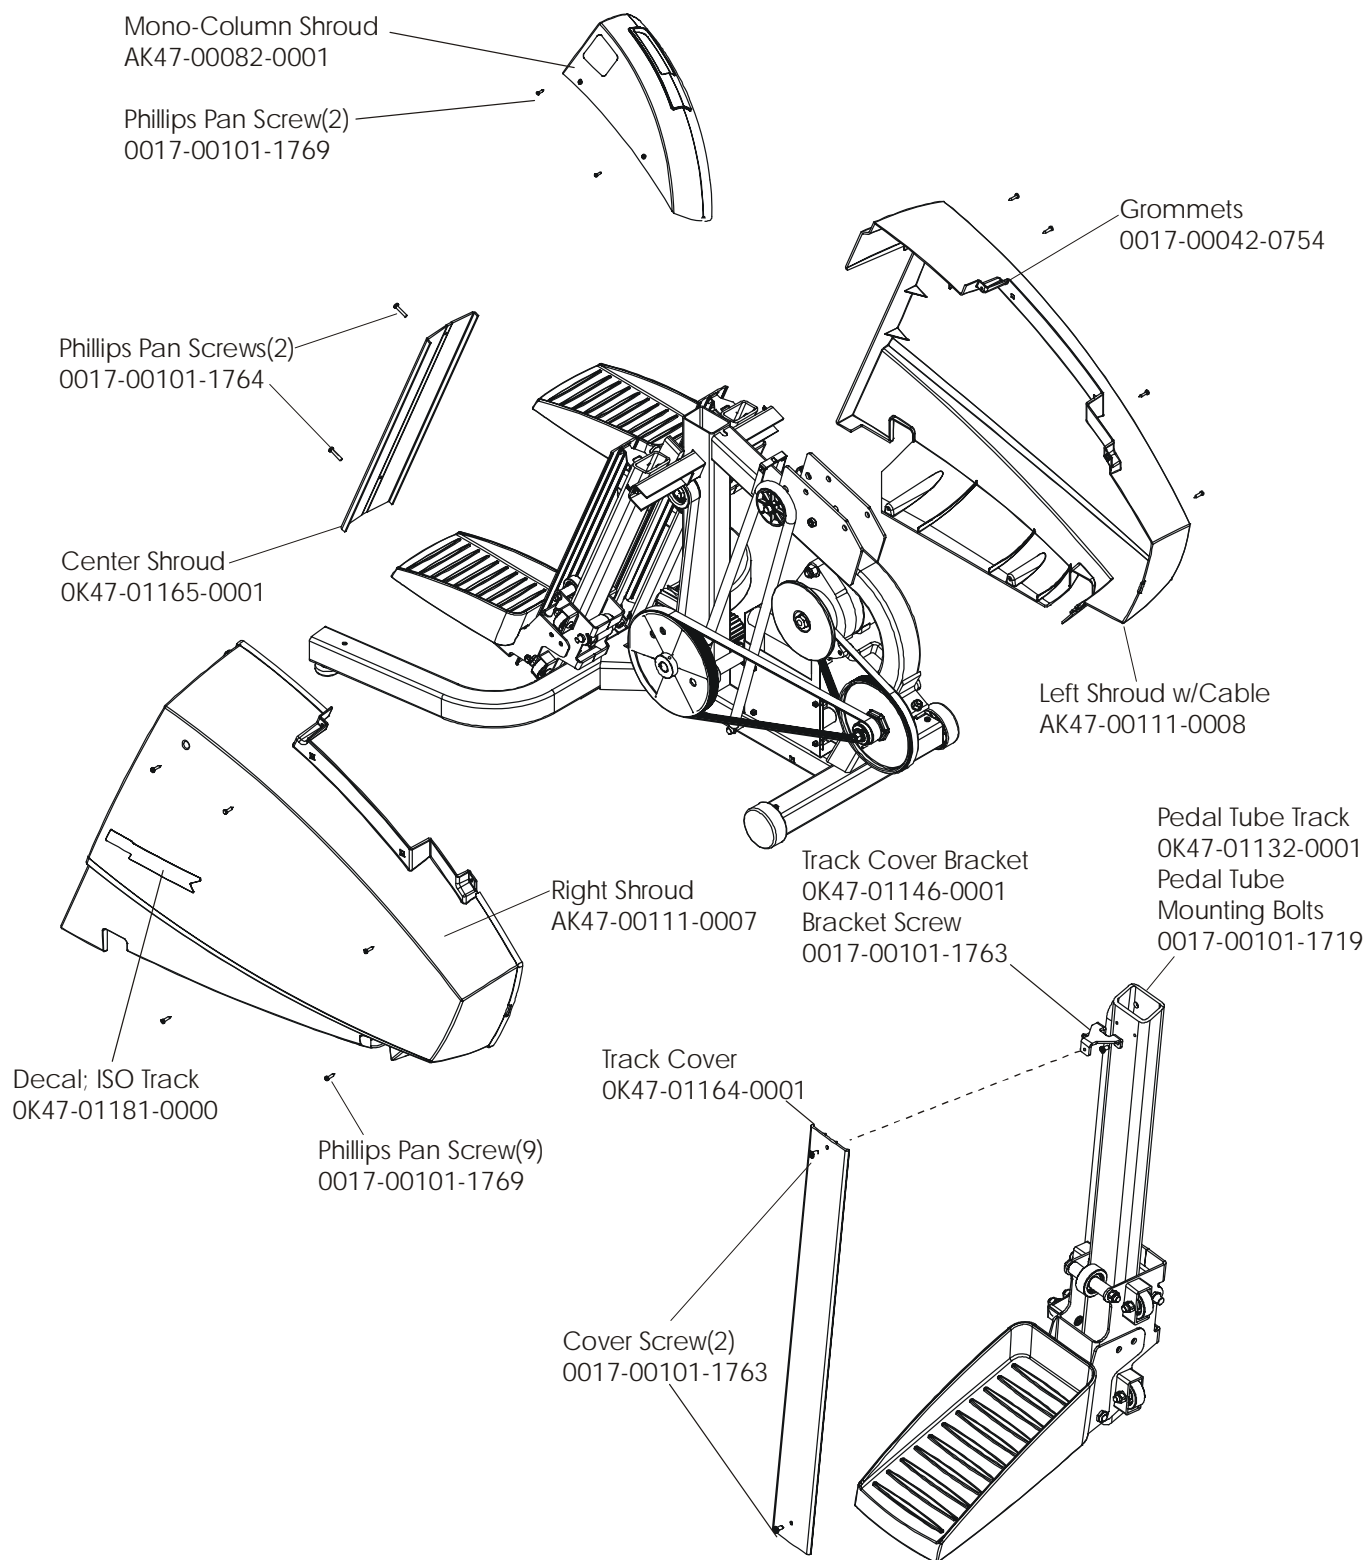


# ARCTIC SILVER 95SE

## Pedal Assembly

95SE-0XXX-04


S/N MSU100000 and up

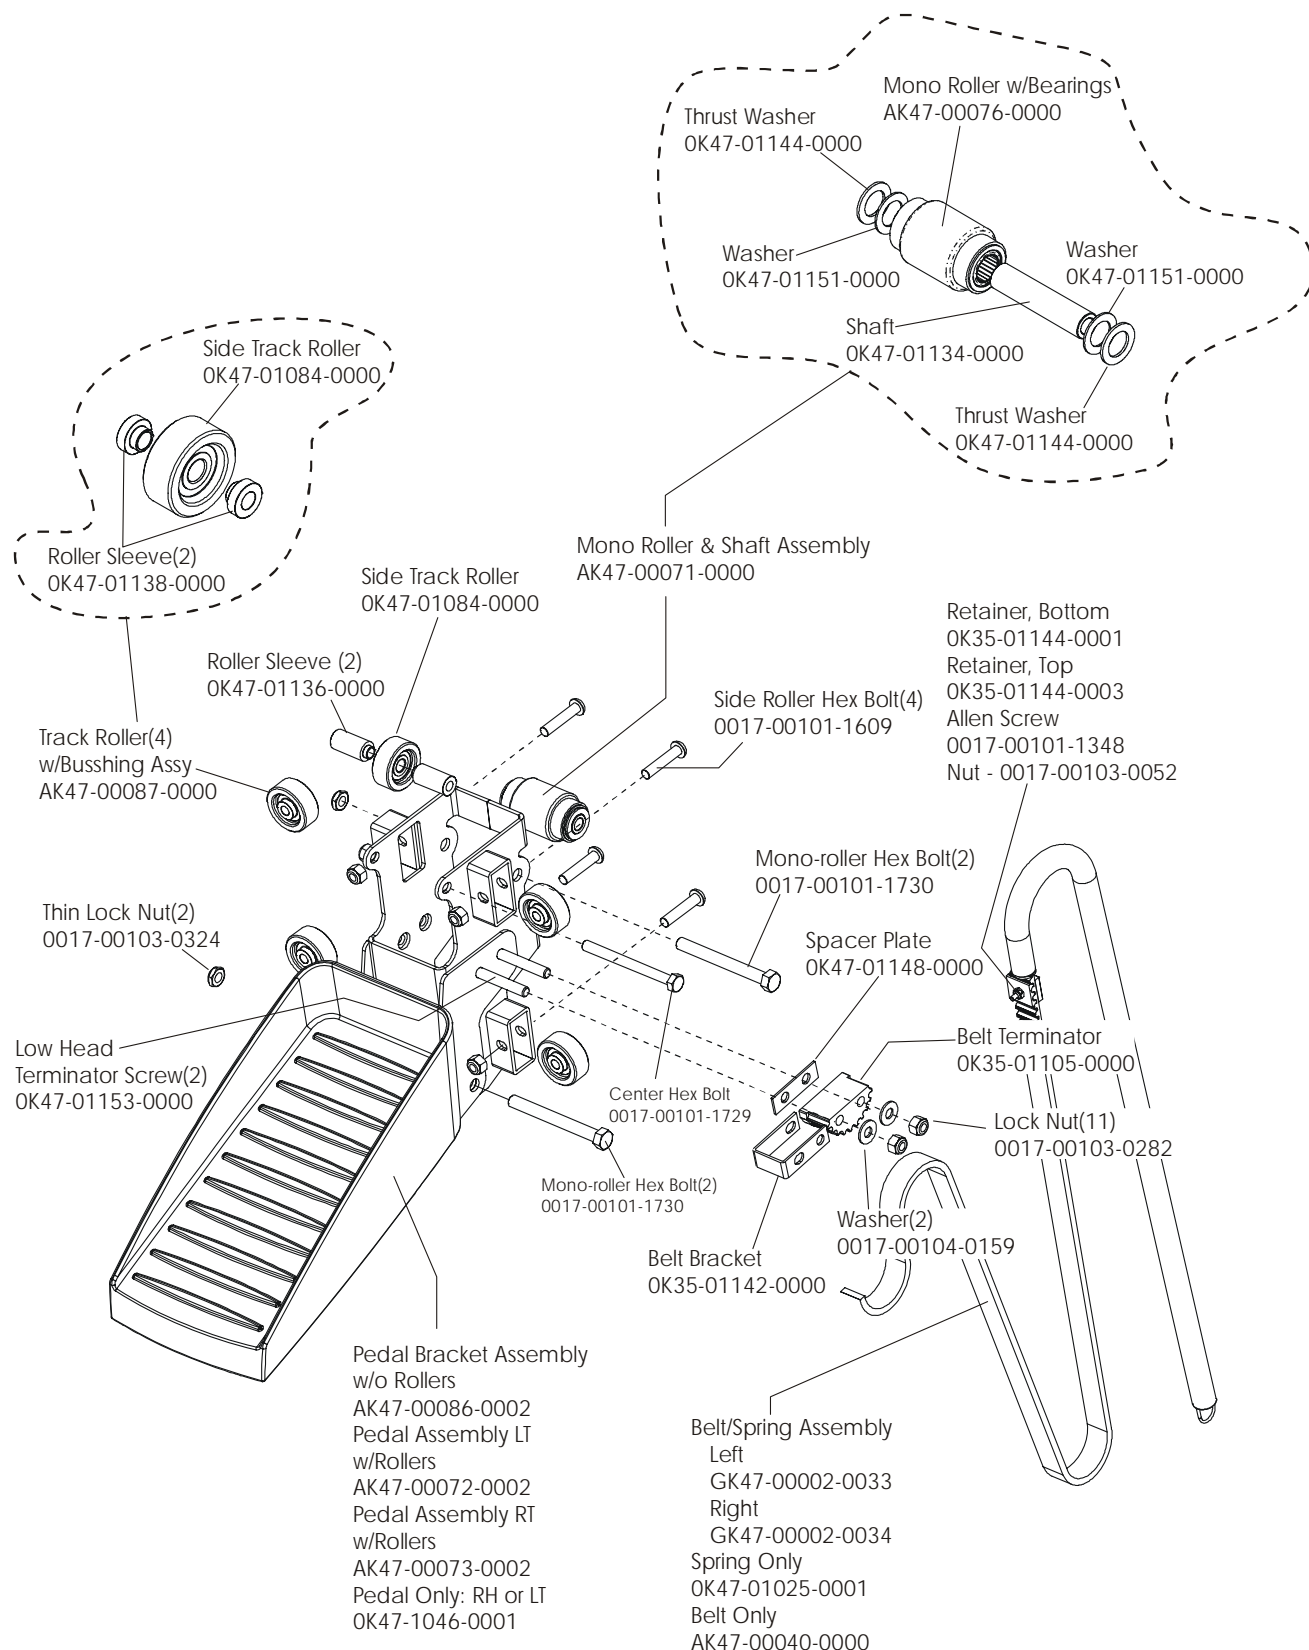




**ARCTIC SILVER 95SE**  
**Clutch/Shaft/Pulley Assembly**


**95SE-0XXX-04**  
**S/N MSU100000 and up**

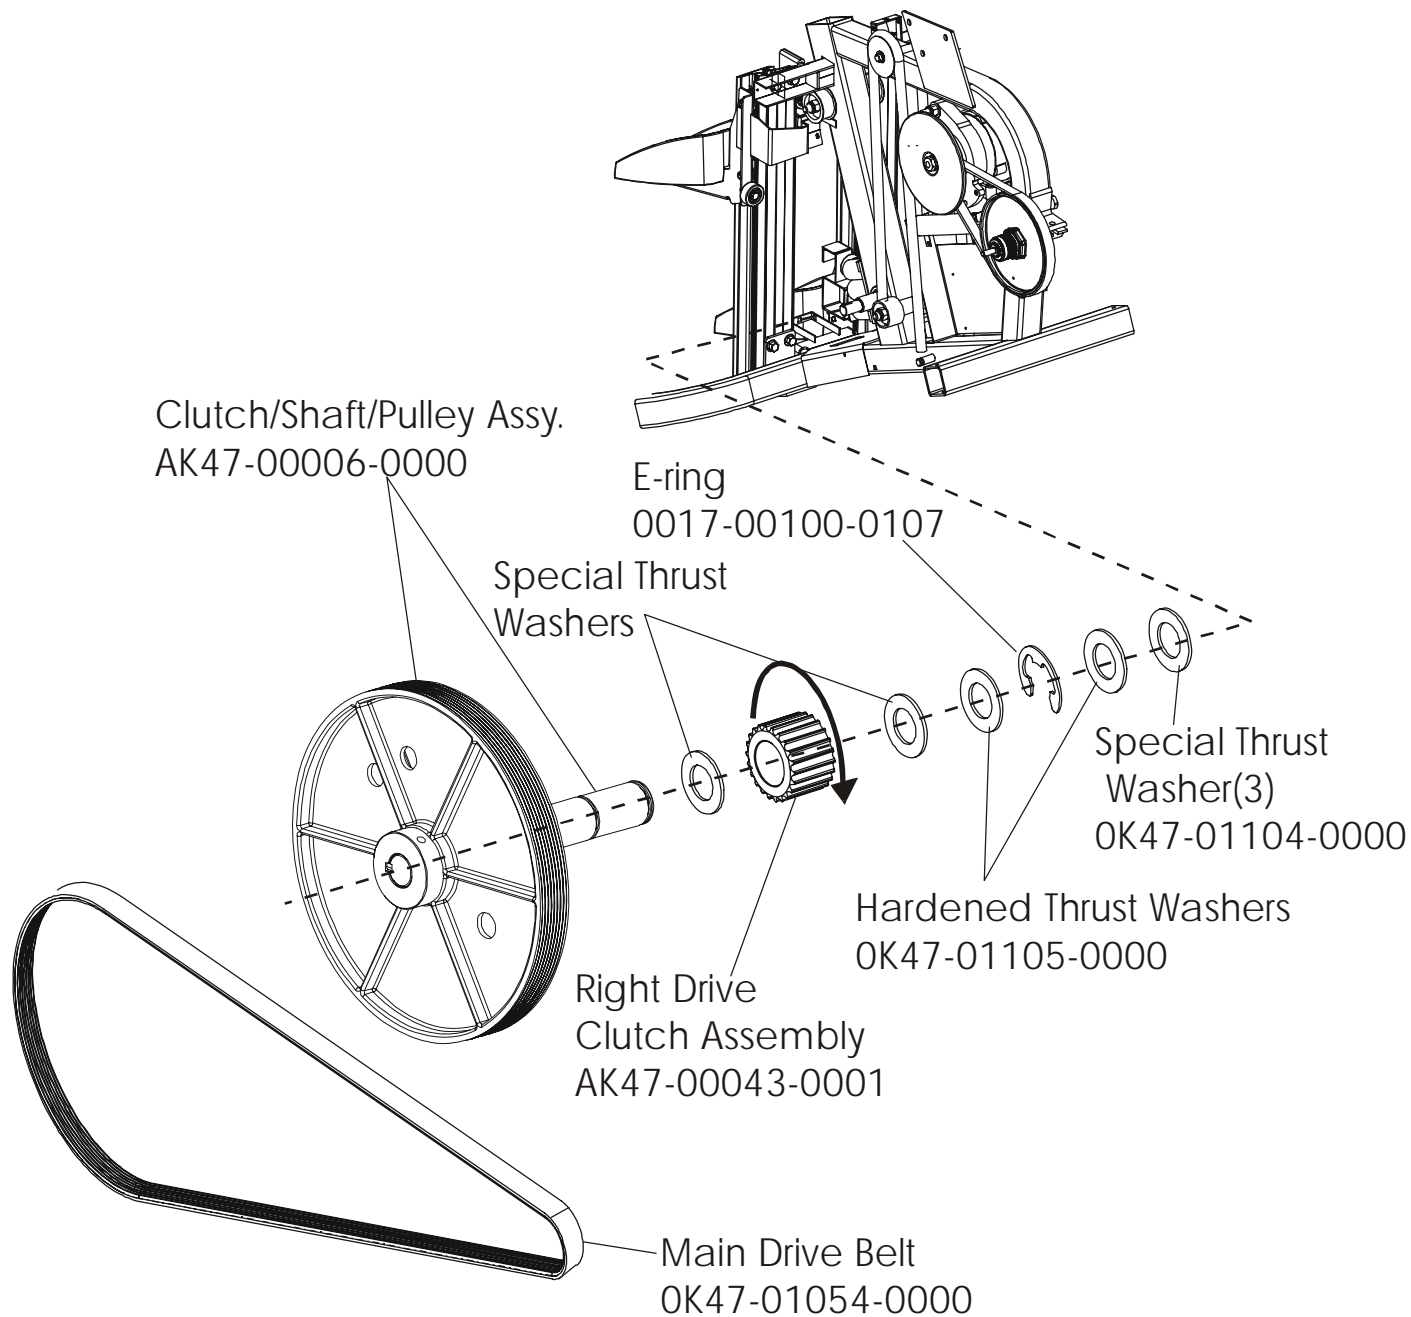

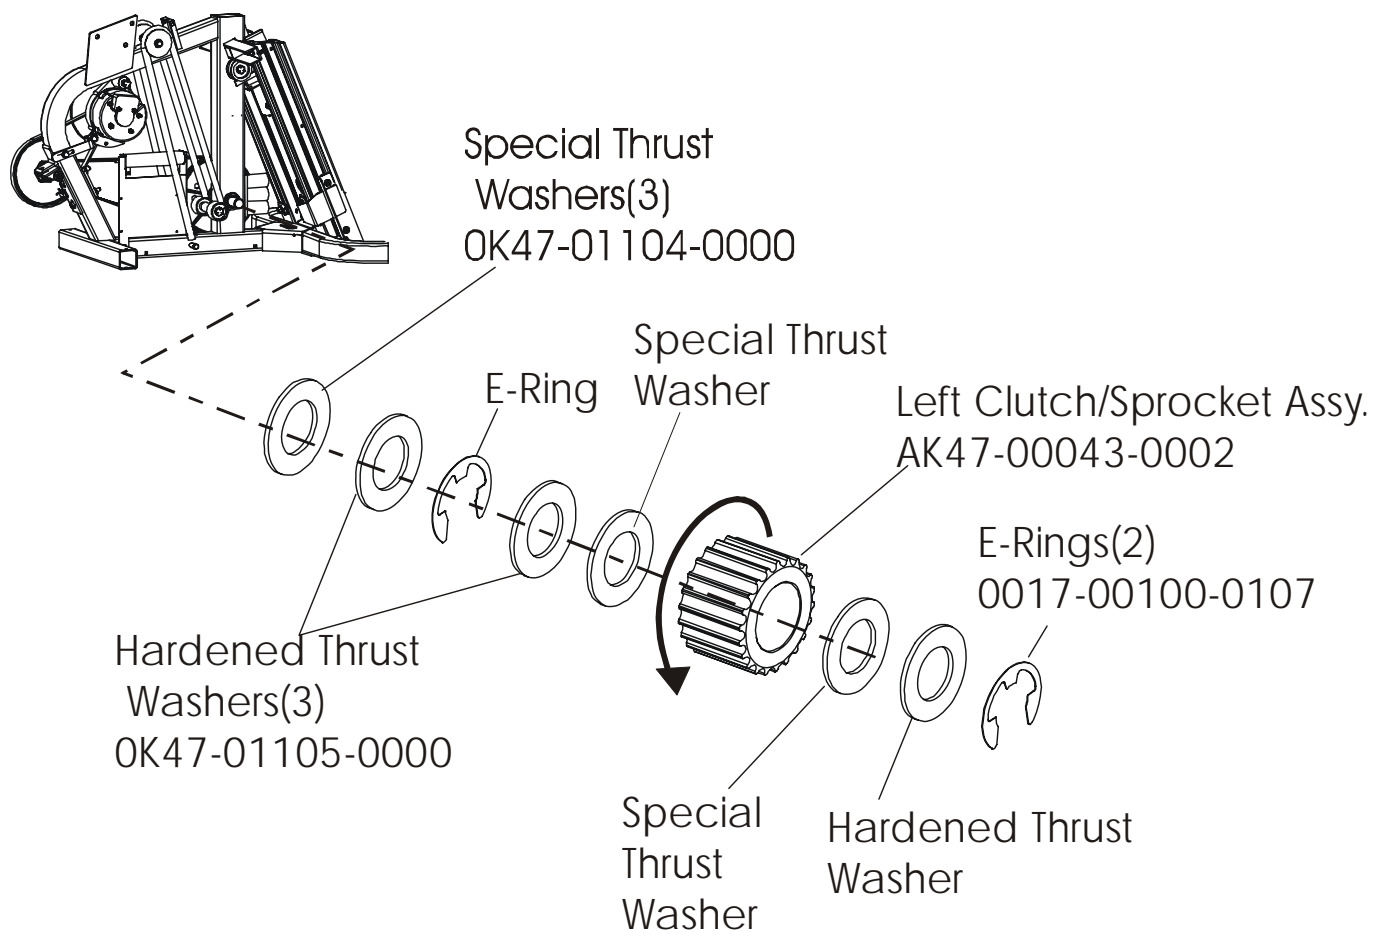

**ARCTIC SILVER 95SE**  
**Crossover Pulley Assembly**

**95SE-0XXX-04**  
**S/N MSU100000 and up**

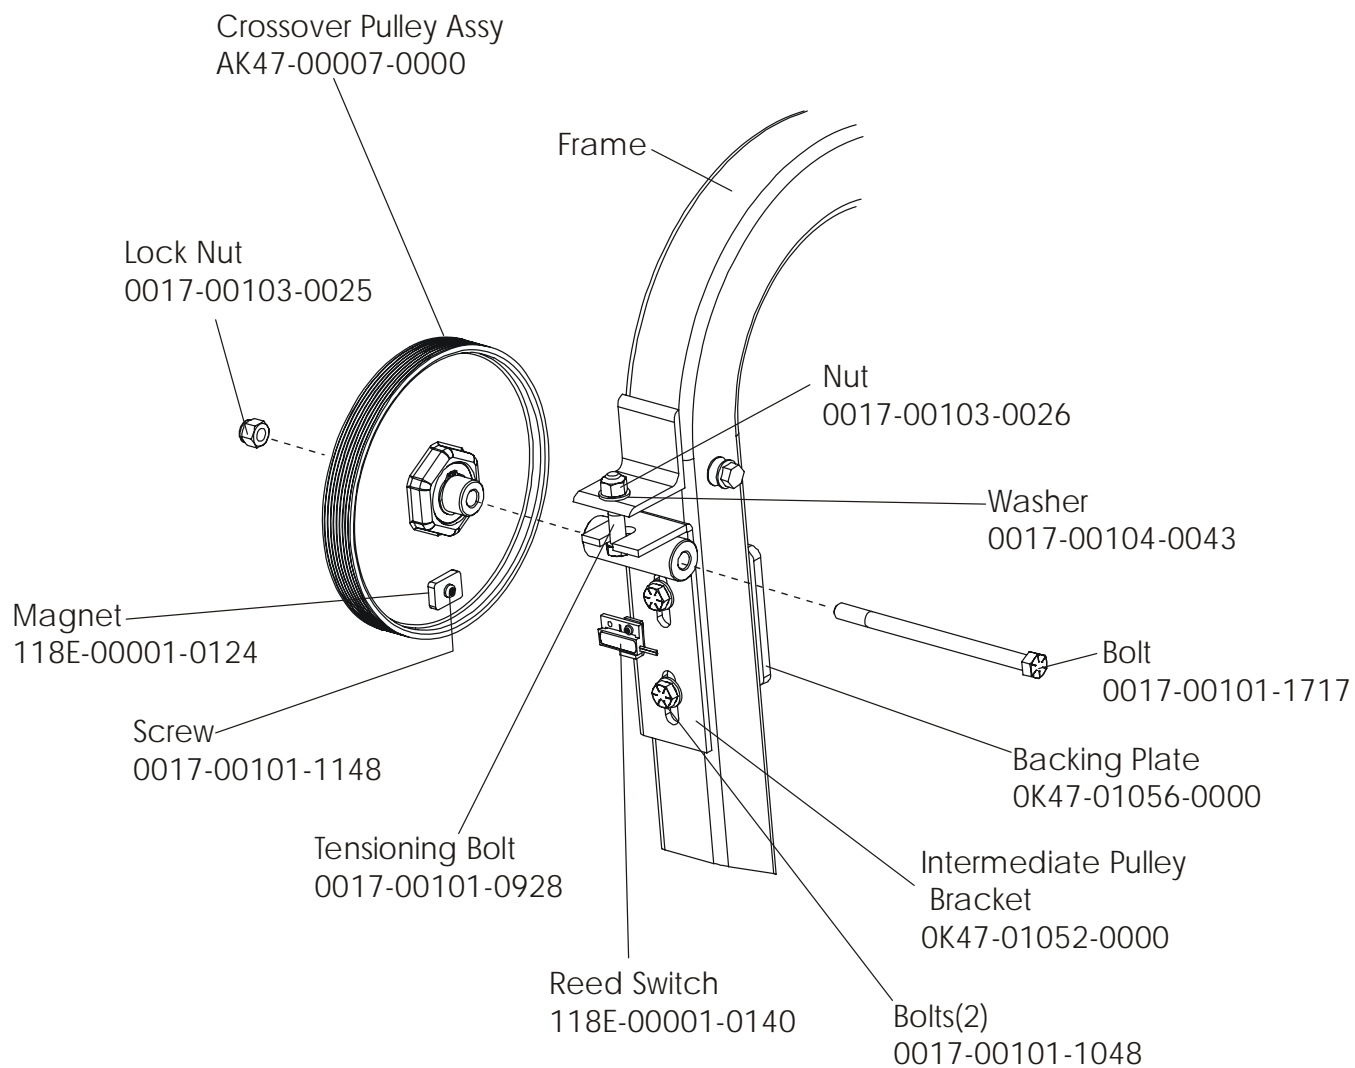



## ARCTIC SILVER 95SE

### Alternator Assembly

95SE-0XXX-04


S/N MSU100000 and up

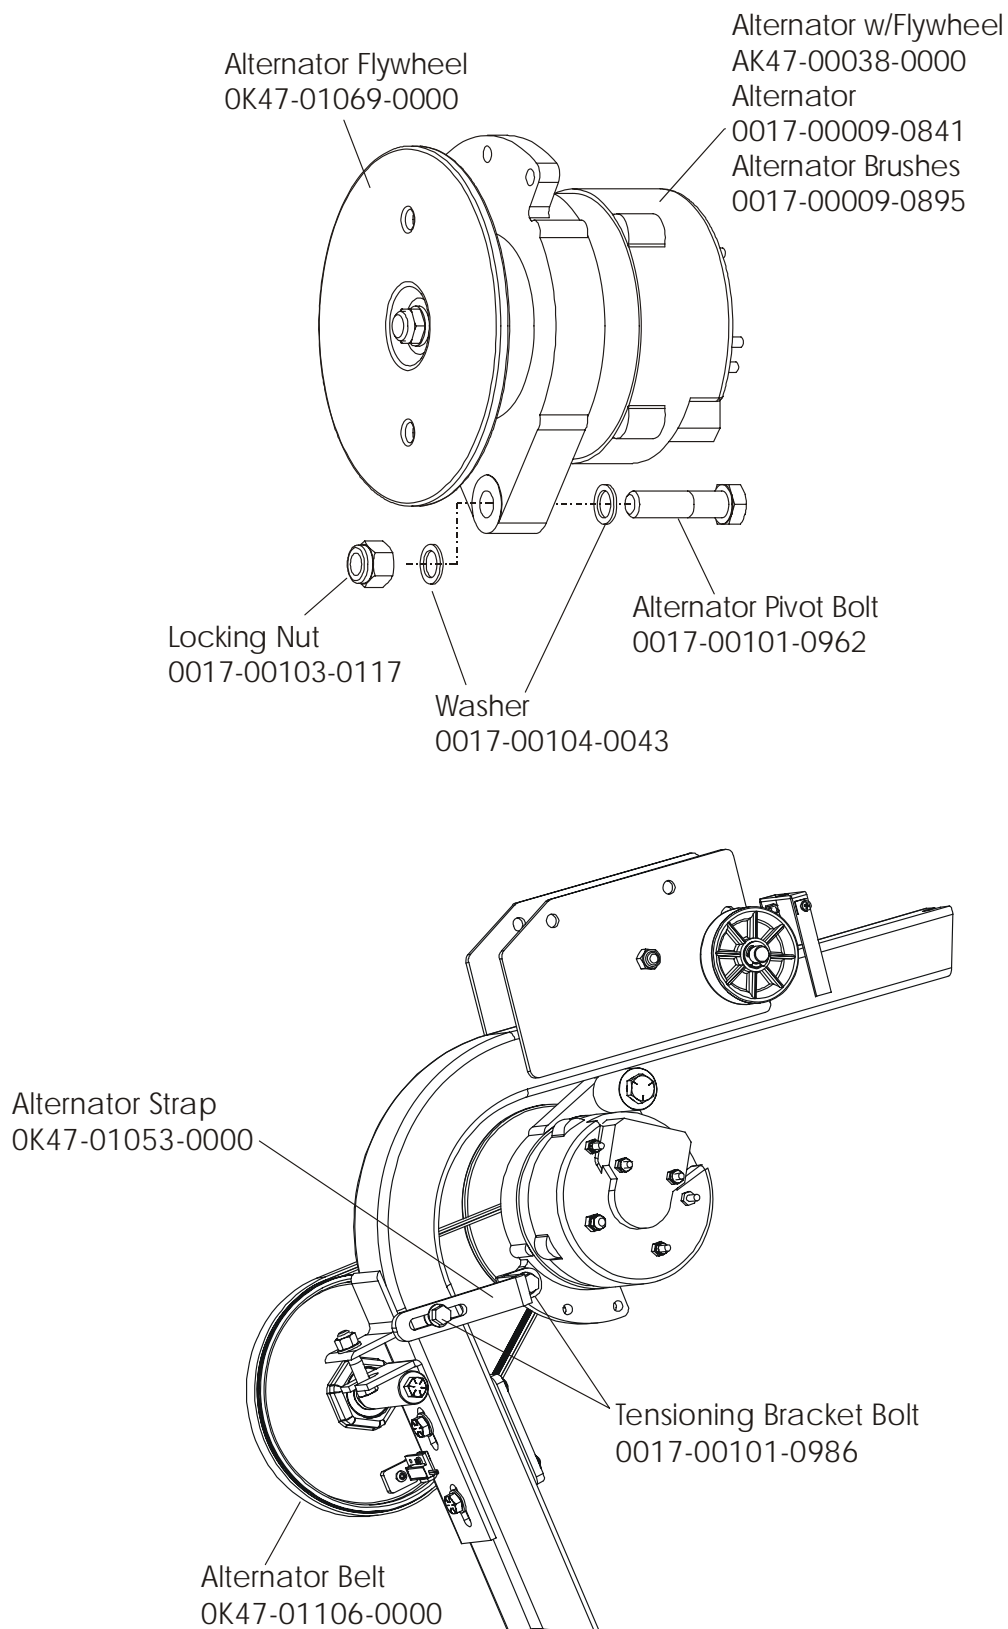

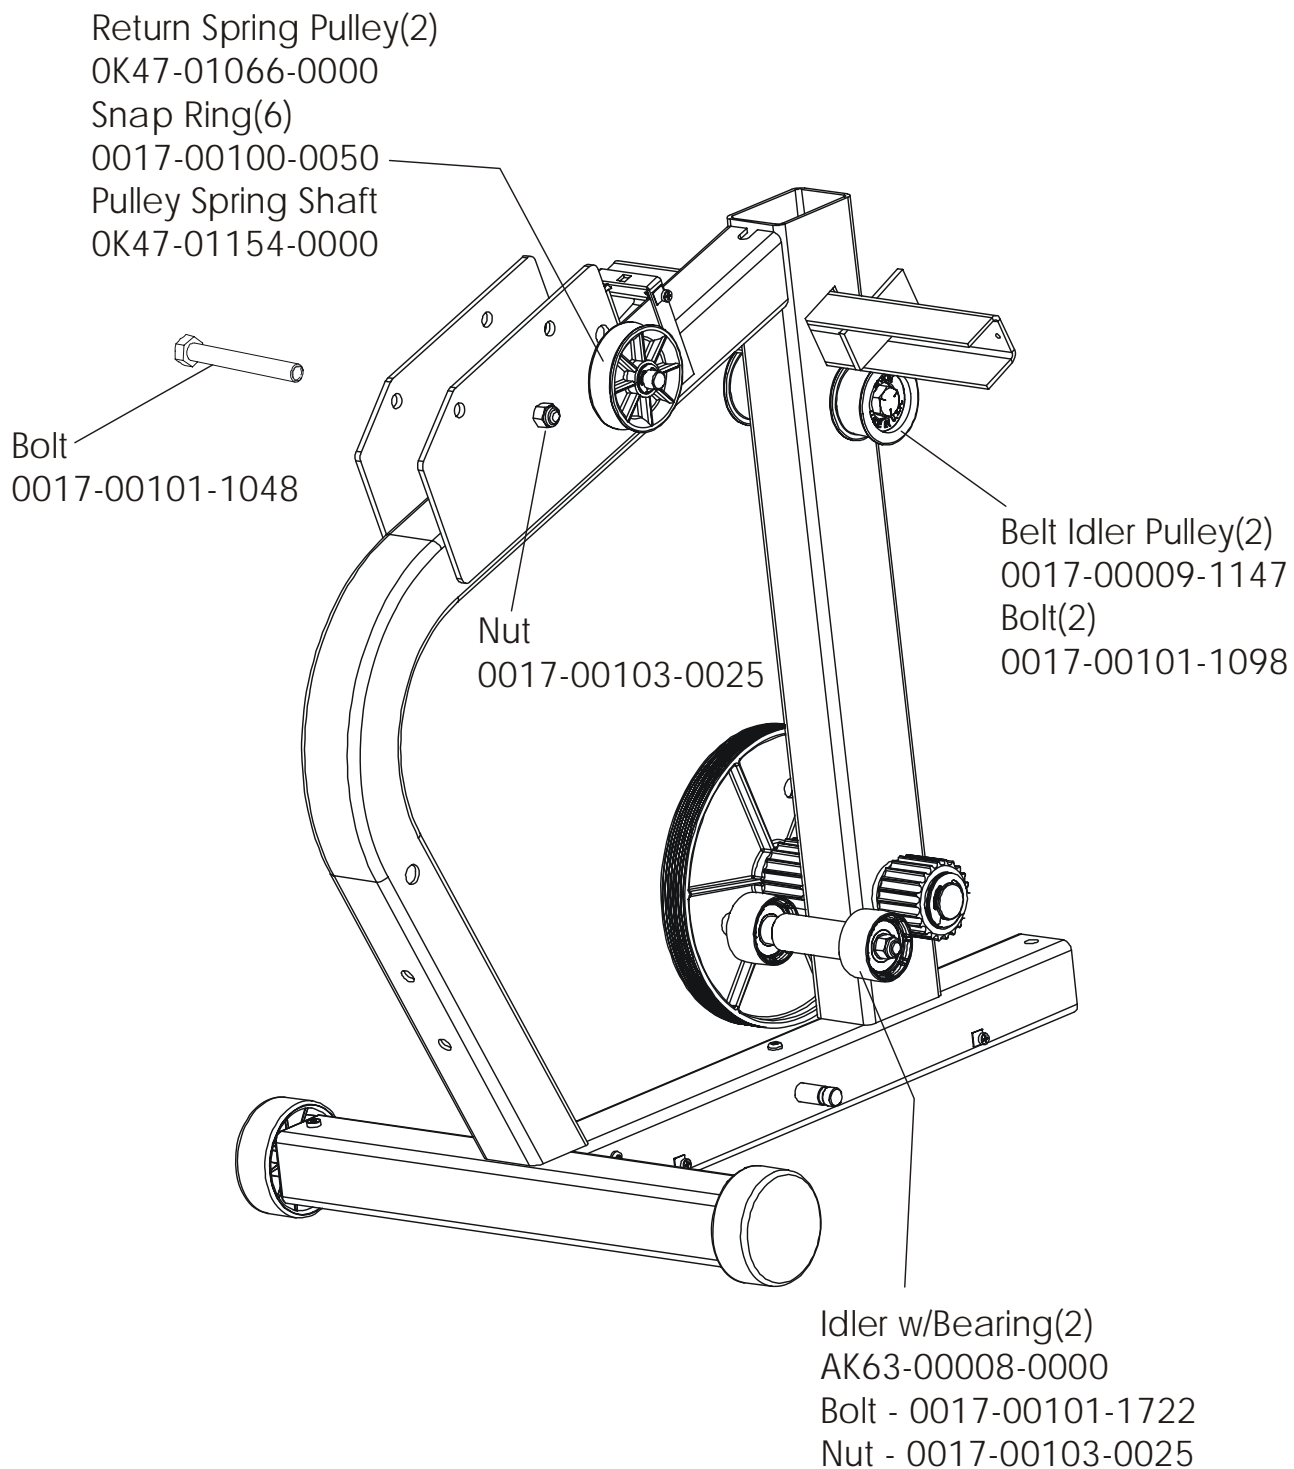


**ARCTIC SILVER 95SE**  
**Power Control Board & Resistor**

**95SE-0XXX-04**  
**S/N MSU100000 and up**

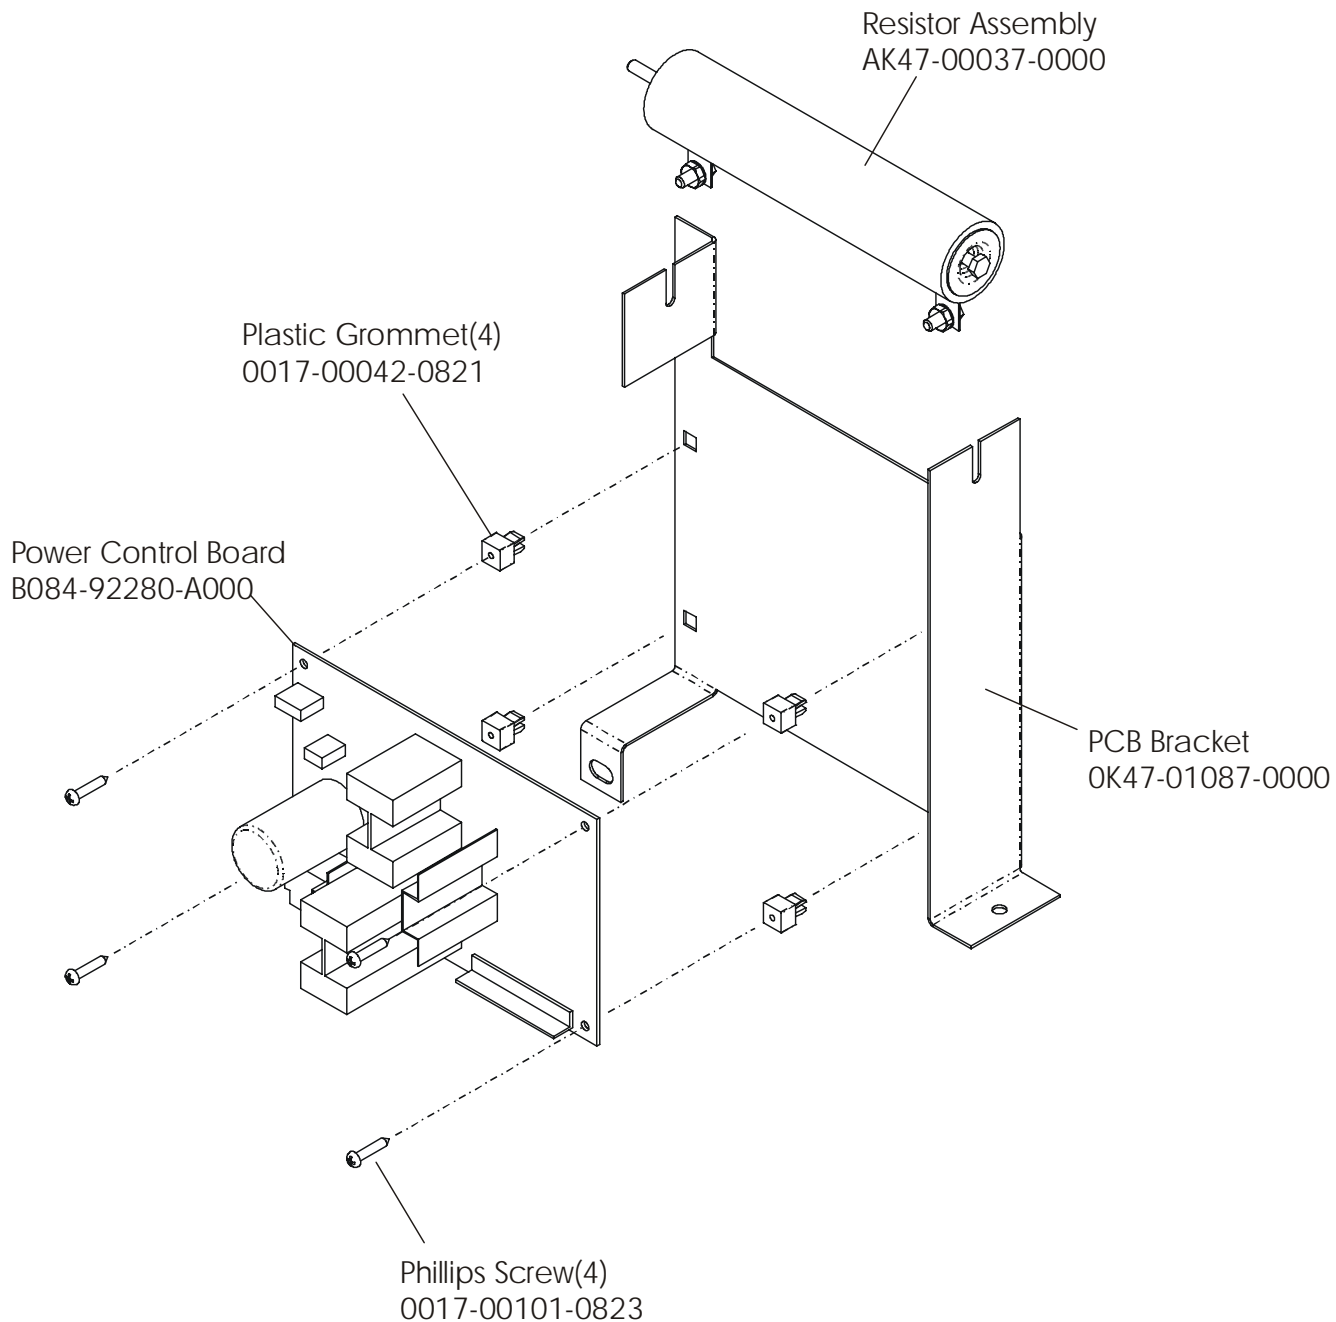

**ARCTIC SILVER 95SE**  
**Polar Cap & HR Electrodes**

**95SE-0XXX-04**  
**S/N MSU100000 and up**

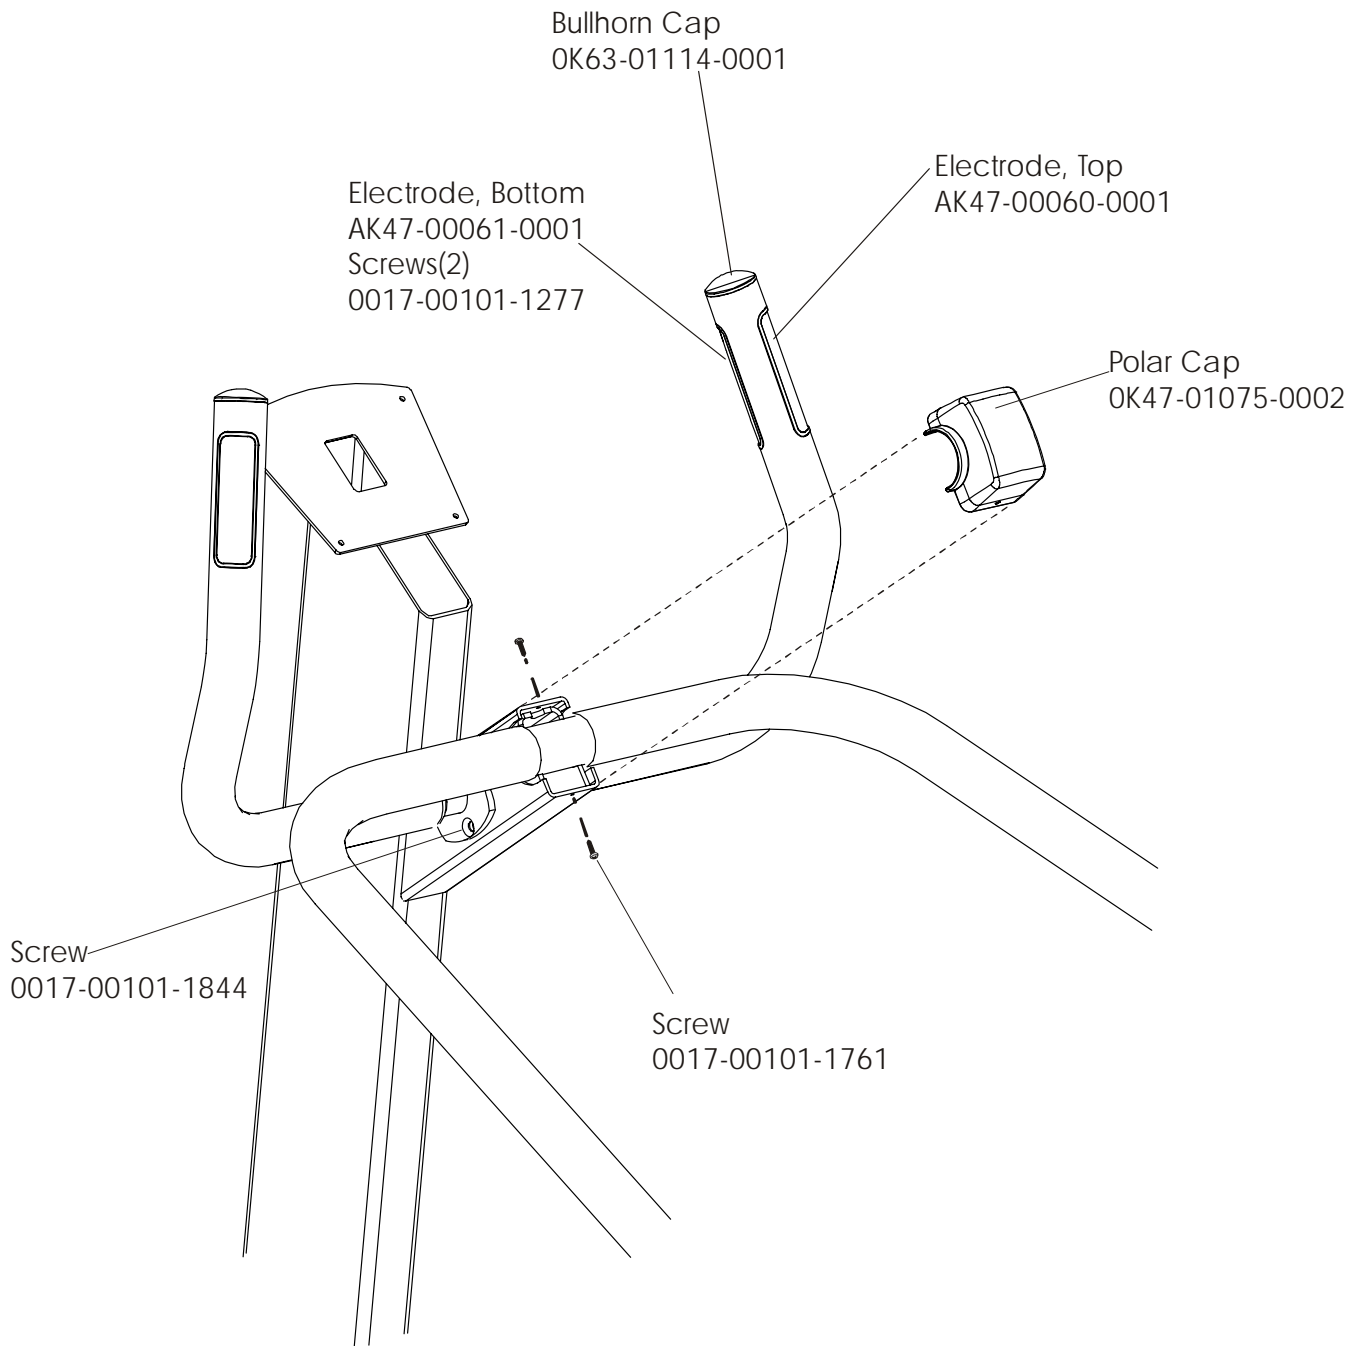

# ARCTIC SILVER 95SE

## Cables

95SE-0XXX-04  
S/N MSU100000 and up

